



How to build STM32MPU distribution for Android



Contents

1. How to build STM32MPU distribution for Android	3
2. Which STM32MPU Embedded Software Package for Android better suits your needs	5
3. PC prerequisites	5
4. How to customize the STM32MPU distribution for Android	5
5. STM32MP1 Distribution Package for Android	5



How to build STM32MPU distribution for Android

Stable: 09.10.2019 - 13:14 / Revision: 20.09.2019 - 14:30

This article explains how to build the STM32MPU distribution for Android™. It is intended for Distribution Package users.

Contents

1 Prerequisites	3
2 Build	3
2.1 Memory settings	4
2.2 Setup	4
2.3 Choosing a build target	4
2.4 Generating the image	5

1 Prerequisites

The environment must be installed using the Distribution Package adapted to your microprocessor device (see the list of [Android Distribution Package](#)).

In addition follow the [PC prerequisites](#) dedicated to Android to make sure all the packages required to use the environment are present.

2 Build

First execute the following command:

```
PC $> source ./build/envsetup.sh
```

It sets all the environment variables required to execute all the scripts and work in the distribution environment. It is mandatory to start with this command as soon as you are using a new terminal.

Use the command below to list some interested aliases created by `envsetup.sh`:

```
PC $> hmm
```

If this is the first time you set up an environment to build Android, continue to read this article. Otherwise directly go to [Choosing a build target](#).



2.1 Memory settings

The memory size and type can be changed. More information refer to [How to customize the STM32MPU distribution for Android](#).

Edit the device/stm/ **<STM32Series>**/layout/android_layout.config file.

Locate the two lines below:

```
PART_MEMORY_TYPE  
PART_MEMORY_SIZE
```

Current options are :

- PART_MEMORY_TYPE sd and PART_MEMORY_SIZE 8GiB
- PART_MEMORY_TYPE sd and PART_MEMORY_SIZE 4GiB
- PART_MEMORY_TYPE emmc and PART_MEMORY_SIZE 4GiB

When the file has been modified, relaunch the previous command:

```
PC $> source ./build/envsetup.sh
```

2.2 Setup

Execute this **<STM32Series>** setup only once, for example for STM32MP1 Series:

```
PC $> stm32mp1setup
```

It applies specific patches related to your **<STM32Series>** to customize Android and load the necessary libraries and modules.

2.3 Choosing a build target

To choose your target device, execute the command below:

```
PC $> lunch aosp_<BoardId>-<build_type>
```

The available build_type values are the following:

- user: to generate an end-user production image;
- userdebug: similar to an user build but with root access and debug capabilities;
- eng: development configuration with additional debugging tools.



2.4 Generating the image

You are now ready to compile. To do this, just launch the command:

```
PC $> make -j
```

Depending on your computer settings, several hours might be required to execute this command on the first build.

The result can be found in the out folder. The generated partition images are located in out/target/product/<BoardId>.

To flash images, refer to [Flashing the built image](#).

stm32mp1

eval,disco (Generic term used, to complete configuration modules paths depending on used board)

Permission error

Stable: 12.12.2019 - 09:14 / Revision: 12.12.2019 - 09:13

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 21.02.2020 - 08:23 / Revision: 14.02.2020 - 16:43

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 25.02.2020 - 08:21 / Revision: 18.10.2019 - 12:32

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 16.04.2020 - 07:58 / Revision: 16.04.2020 - 07:48

You do not have permission to read this page, for the following reason:



How to build STM32MPU distribution for Android

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer