

How to copy and paste in the STM32CubeIDE console

How to copy and paste in the STM32CubeIDE console



How to copy and paste in the STM32CubeIDE console



1 From STM32CubeIDE console to gedit

To copy, into the Clipboard, a text area selected in an "Opened Console", use shortkey < CTRL > + < inser >.

```
🔝 Problems 🔊 Tasks 🖳 Console 🛭 🗉 Properties 👭 Call Graph 🖼 Debugger Console
MPU Serial (CONNECTED)
2mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo# cd
root@stm32mp1-eval:~# cd
/usr/local/examples/OpenAMP_TTY_echo
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo# ls
README fw_cortex_m4.sh lib
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP TTY echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP TTY echo#
 lrwxr-xr-x 2 root root 1024 Jan 7 02:44 firmware
 otal 1757
-rwxr-xr-x 1 root root 1/99016 Jan 7 02:44 SIM3ZMP15_M4
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
```

You will then be able to paste with: < CTRL > + V.



How to copy and paste in the STM32CubeIDE console

```
🤊 🗐 🏮 *Untitled Document 1 - gedit
             Ħ
 Open ▼
                                                                                           Save
root@stm32mp1-eval:/usr/local/examples/OpenAMP TTY echo# ls -lRt
total 10
-rw-r--r-- 1 root root 4911 Jan 23 2018 README
-rwxr-xr-x 1 root root 3553 Jan 23 2018 fw_cortex_m4.sh
drwxr-xr-x 3 root root 1024 Jan 16 2018 lib
./lib:
total 1
drwxr-xr-x 2 root root 1024 Jan 7 02:44 firmware
./lib/firmware:
total 1757
-rwxr-xr-x 1 root root 1799016 Jan 7 02:44 STM32MP15_M4_EVAL_OpenAMP_TTY_echo.elf
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP TTY echo#
root@stm32mp1-eval:/usr/local/examples/OpenAMP_TTY_echo#
                                    Plain Text ▼
                                                 Tab Width: 8 ▼
                                                                      Ln 19, Col 58
                                                                                            INS
```





2 From gedit to STM32CubeIDE console

To copy, into the Clipboard, a text area selected your gedit text editor, use shortkey < CTRL > + C It is possible to paste it to the STM32CubeIDE console with: < SHIFT > + < inser >.