



## How to disable one CPU



## Contents

---

1. How to disable one CPU .....	3
---------------------------------	---



## How to disable one CPU

Stable: 07.10.2019 - 15:22 / Revision: 07.10.2019 - 15:21

### 1 How to see the number of active CPU

```
root@st:~# cat /proc/cpuinfo
processor       : 0
model name    : ARMv7 Processor rev 0 (v7l)
BogoMIPS     : 2387.14
Features     : swp half thumb fastmult vfp edsp neon vfpv3 tls
CPU implementer : 0x41
CPU architecture: 7
CPU variant   : 0x3
CPU part     : 0xc09
CPU revision  : 0

processor       : 1
model name    : ARMv7 Processor rev 0 (v7l)
BogoMIPS     : 2393.70
Features     : swp half thumb fastmult vfp edsp neon vfpv3 tls
CPU implementer : 0x41
CPU architecture: 7
CPU variant   : 0x3
CPU part     : 0xc09
CPU revision  : 0

Hardware      : STi SoC with Flattened Device Tree
Revision     : 0000
Serial       : 0000000000000000
```

### 2 How to disable a CPU

On this example we disable CPU1

```
root@st:~# echo 0 > /sys/devices/system/cpu/cpu1/online
CPU1: shutdown
root@st:~# cat /proc/cpuinfo
processor       : 0
model name    : ARMv7 Processor rev 0 (v7l)
BogoMIPS     : 2387.14
Features     : swp half thumb fastmult vfp edsp neon vfpv3 tls
CPU implementer : 0x41
CPU architecture: 7
CPU variant   : 0x3
CPU part     : 0xc09
CPU revision  : 0

Hardware      : STi SoC with Flattened Device Tree
Revision     : 0000
Serial       : 0000000000000000
```



---

## 3 How to enable a disabled CPU

---

On this example we enable CPU1

```
root@st:~# echo 1 > /sys/devices/system/cpu/cpu1/online
CPU1: shutdown
```

Central processing unit