



How to disable one CPU



How to disable one CPU

Stable: 07.10.2019 - 15:22 / Revision: 07.10.2019 - 15:21

1 How to see the number of active CPU

```
root@st:~# cat /proc/cpuinfo
processor       : 0
model name     : ARMv7 Processor rev 0 (v7l)
BogoMIPS      : 2387.14
Features       : swp half thumb fastmult vfp edsp neon vfpv3 tls
CPU implementer : 0x41
CPU architecture: 7
CPU variant    : 0x3
CPU part       : 0xc09
CPU revision   : 0

processor       : 1
model name     : ARMv7 Processor rev 0 (v7l)
BogoMIPS      : 2393.70
Features       : swp half thumb fastmult vfp edsp neon vfpv3 tls
CPU implementer : 0x41
CPU architecture: 7
CPU variant    : 0x3
CPU part       : 0xc09
CPU revision   : 0

Hardware       : STi SoC with Flattened Device Tree
Revision       : 0000
Serial        : 0000000000000000
```

2 How to disable a CPU

On this example we disable CPU1

```
root@st:~# echo 0 > /sys/devices/system/cpu/cpu1/online
CPU1: shutdown
root@st:~# cat /proc/cpuinfo
processor       : 0
model name     : ARMv7 Processor rev 0 (v7l)
BogoMIPS      : 2387.14
Features       : swp half thumb fastmult vfp edsp neon vfpv3 tls
CPU implementer : 0x41
CPU architecture: 7
CPU variant    : 0x3
CPU part       : 0xc09
CPU revision   : 0

Hardware       : STi SoC with Flattened Device Tree
Revision       : 0000
Serial        : 0000000000000000
```



3 How to enable a disabled CPU

On this example we enable CPU1

```
root@st:~# echo 1 > /sys/devices/system/cpu/cpu1/online  
CPU1: shutdown
```

Central processing unit