



How to setup target password in STM32CubeIDE

How to setup target password in STM32CubeIDE




A quality version of this page, approved on *16 October 2020*, was based off this revision.



Modifying target password

When debugging Cortex-M in "production mode", in case of typo entering target password, we need to modify target password registered by the STM32CubeIDE. Indeed, this prevent you from using Debug in "production mode".

This password is managed by **MPU SSH** connection object managed by RSE perspective. It is possible to clear corresponding password from here.

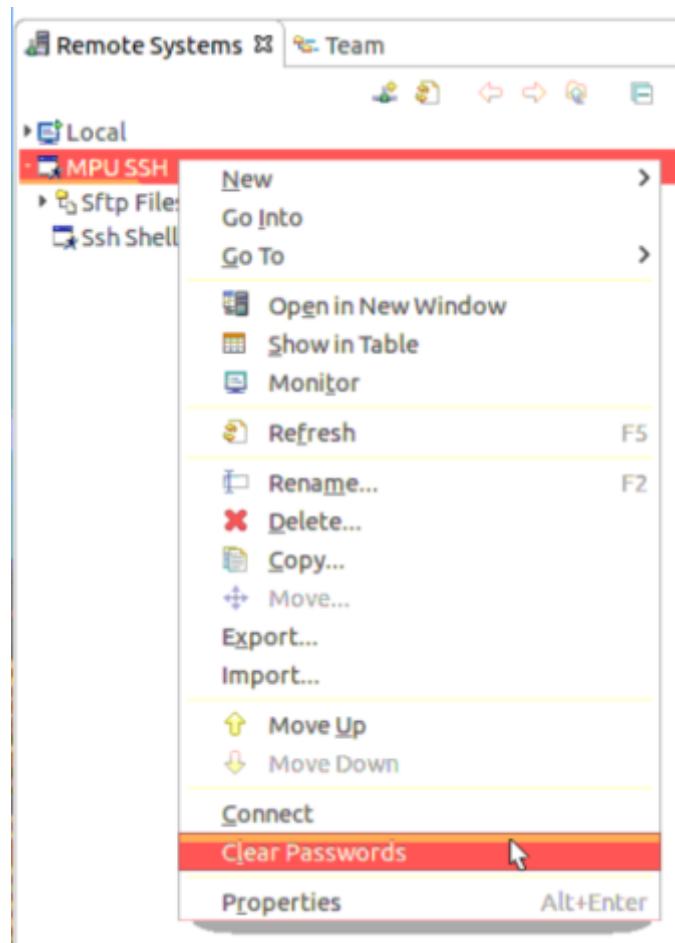

Note that if "MPU SSH" is connected, it has to be disconnected first.

Cortex®

Microprocessor Unit