



Ifconfig



Contents

1. Ifconfig	3
2. Category:Monitoring tools	11
3. IP Linux command line	12



Contents

1 Article purpose	4
2 Introduction	5
3 Installing the trace and debug tool on your target board	7
3.1 Using the STM32MPU Embedded Software distribution	7
3.2 Using the STM32MPU Embedded Software distribution for Android™	7
4 Getting started	8
4.1 List the available network interfaces	8
4.2 Disable the network interface	9
4.3 Enable the network interface if it is not already available	9
4.4 Assign a given IP address to a network interface	9
5 To go further	10
6 References	11



1 Article purpose

This article provides the basic information needed to start using the Linux® kernel tool: **ifconfig**^[1].



2 Introduction

The following table provides a brief description of the tool, as well as its availability depending on the software packages:

✔: this tool is either present (ready to use or to be activated), or can be integrated and activated on the software package.

✘: this tool is not present and cannot be integrated, or it is present but cannot be activated on the software package.

Tool			STM32MPU Embedded Software distribution			STM32MPU Embedded Software distribution for Android™		
Name	Category	Purpose	Starter Package	Developer Package	Distribution Package	Starter Package	Developer Package	Distribution Package
ifconfig	Monitoring tools	<p>ifconfig^[1] is a system administration utility for network interface configuration.</p> <p>ifconfig is deprecated and has been replaced by ip (A web page provides a comparison</p>	✔	✔	✔	✔	✔	✔



Tool			STM32MPU Embedded Software distribution			STM32MPU Embedded Software distribution for Android™		
Name	Category	Purpose	Starter Package	Developer Package	Distribution Package	Starter Package	Developer Package	Distribution Package
		between n ifconfig and ip [2])						



3 Installing the trace and debug tool on your target board

3.1 Using the STM32MPU Embedded Software distribution

ifconfig is installed by default and ready to be used with all STM32MPU Embedded Software Packages.

It comes with the **busybox**:

```
Board $> which ifconfig | xargs ls -la  
/sbin/ifconfig -> /bin/busybox.nosuid
```

3.2 Using the STM32MPU Embedded Software distribution for Android™

ifconfig is installed by default and ready to be used with all STM32MPU Embedded Software Packages for Android™.

It comes with the **toybox**:

```
Board $> which ifconfig | xargs ls -la  
/system/bin/ifconfig -> toybox
```



4 Getting started

Follow the sequence described below to get started with the ifconfig tool.

Below information is related to the Android™ distribution

Need to enable root access rights for any changes

- Using ADB shell is ADB link available:



```
PC $> adb root
PC $> adb shell
Board $> ...
```

- Using uart console shell:

```
Board $> su
Board $> ...
```

4.1 List the available network interfaces

```
Board $> ifconfig
```

```
eth0      Link encap:Ethernet  HWaddr 00:80:E1:42:43:65
          inet addr:10.48.1.144  Bcast:10.48.3.255  Mask:255.255.252.0
          inet6 addr: fe80::280:e1ff:fe42:4365%lo/64 Scope:Link
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:181274 errors:0 dropped:14553 overruns:0 frame:0
          TX packets:28583 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:23082127 (22.0 MiB)  TX bytes:6438412 (6.1 MiB)
          Interrupt:66 Base address:0x4000

lo        Link encap:Local Loopback
          inet addr:127.0.0.1  Mask:255.0.0.0
          inet6 addr: ::1%1/128 Scope:Host
          UP LOOPBACK RUNNING  MTU:65536  Metric:1
          RX packets:202 errors:0 dropped:0 overruns:0 frame:0
          TX packets:202 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:13454 (13.1 KiB)  TX bytes:13454 (13.1 KiB)
```




4.2 Disable the network interface



Please make sure that no remote terminal is connected through this network (ssh), otherwise you will lost your shell connection.

- For example, proceed as follows for eth0

```
Board $> ifconfig eth0 down
```

4.3 Enable the network interface if it is not already available

- For example, proceed as follows for eth0

```
Board $> ifconfig eth0 up
```

4.4 Assign a given IP address to a network interface

- Proceed as follows to assign 10.48.1.324 address to eth0

```
Board $> ifconfig eth0 10.48.1.324
```



5 To go further

Refer to the man page^[1] for more details on command options.



6 References

- 1.01.11.2 <https://linux.die.net/man/8/ifconfig>
- https://tty1.net/blog/2010/ifconfig-ip-comparison_en.html

Linux® is a registered trademark of Linus Torvalds.

Android debug bridge (Android specific)

uniprocessor

Receive

Transmit

Stable: 17.06.2020 - 15:26 / Revision: 16.01.2020 - 13:39

Invalid target: no reviewed revision corresponds to the given ID.

Return to [Category:Monitoring tools](#).



Subcategories

This category has only the following subcategory.

1

- [Linux monitoring tools \(16 P\)](#)
Stable: 09.10.2019 - 15:29 / Revision: 04.09.2019 - 07:41

Invalid target: no reviewed revision corresponds to the given ID.

[Return to IP Linux command line.](#)