



Welcome



Welcome

## Welcome

Stable: 10.03.2020 - 15:05 / Revision: 09.03.2020 - 15:28



### Welcome to the STM32 Arm<sup>®</sup> Cortex<sup>®</sup>-based MPUs user guide!

This user guide aims at assisting developers to use STM32 MPUs microprocessor devices from STMicroelectronics, starting with the **STM32MP1 series**. <sup>[1]</sup>

It contains many articles to discover the **STM32MP1 series** and associated **ecosystems** (STM32 boards, embedded software, development tools, trace & debug tools...).



The new release (**STM32 MP15 ecosystem release v1.2.0**) for STM32MP1 series is arrived!  
Discover all new features browsing associated [STM32MP15 ecosystem release note](#) or start playing with it jumping to the [Getting started zone](#).



Now, let you drive by links given in the articles, starting with the ones below.





Welcome

### Getting started

Be guided **step-by-step** to take a grip on the boards and the ecosystem for the STM32 Arm Cortex-based MPUs

### Development zone

Go through around 500 articles, regularly updated, on the STM32 Arm Cortex-based MPU

This user guide complements the resources available on STMicroelectronics web site for the [STM32 Arm Cortex-based MPUs](#).

It is strongly recommended, before starting browsing this user guide, to go through the [legal notice](#), and the [reading tips](#).

For **communication and support** , you can use [ST Support Center](#) or [ST Community MPU Forum](#).

*Chrome and Firefox browsers are recommended.*

- [\[1\]STM32MP1 series on st.com](#)