



# OpenSTLinux BSP architecture overview



## Contents

---

1. OpenSTLinux BSP architecture overview .....	3
2. U-Boot overview .....	3

# OpenSTLinux BSP architecture overview

Stable: 11.02.2019 - 11:21 / Revision: 10.01.2019 - 08:52


A [quality version](#) of this page, [accepted](#) on 11 February 2019, was based off this revision.

[Template:ArticleMainWriter](#) [Template:ArticleApprovedVersion](#)

The **OpenSTLinux BSP** encompasses the following components:

- The **boot chain** based on **TF-A** and **U-Boot**
- The **OP-TEE secure OS** running on the Cortex-A in secure mode
- The **Linux kernel** running on the Cortex-A in non-secure mode

The figure below is clickable so that the user can directly jump to one of the sub-levels listed above.

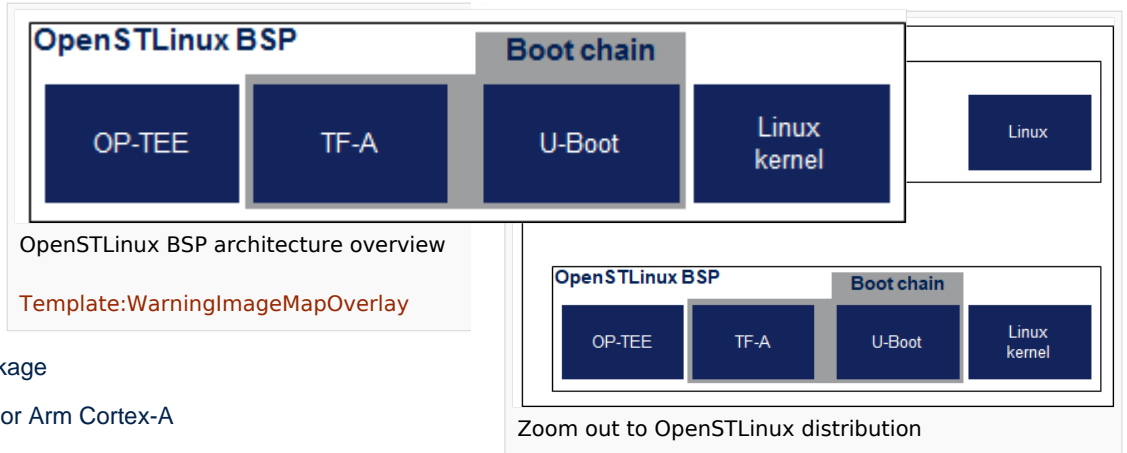

[Board support package](#)

[Trusted Firmware for Arm Cortex-A](#)

[Das U-Boot -- the Universal Boot Loader \(see U-Boot\\_overview\)](#)

[Open Portable Trusted Execution Environment](#)

[Operating System](#)

# OpenSTLinux BSP architecture overview

Stable: 23.01.2020 - 13:52 / Revision: 23.01.2020 - 13:46

[Template:ArticleMainWriter](#) [Template:ArticleApprovedVersion](#)


The **OpenSTLinux BSP** encompasses the following components:

- The **boot chain** based on **TF-A** and **U-Boot**
- The **OP-TEE secure OS** running on the Cortex-A in secure mode
- The **Linux kernel** running on the Cortex-A in non-secure mode

The figure below is clickable so that the user can directly jump to one of the sub-levels listed above.



## OpenSTLinux BSP architecture overview

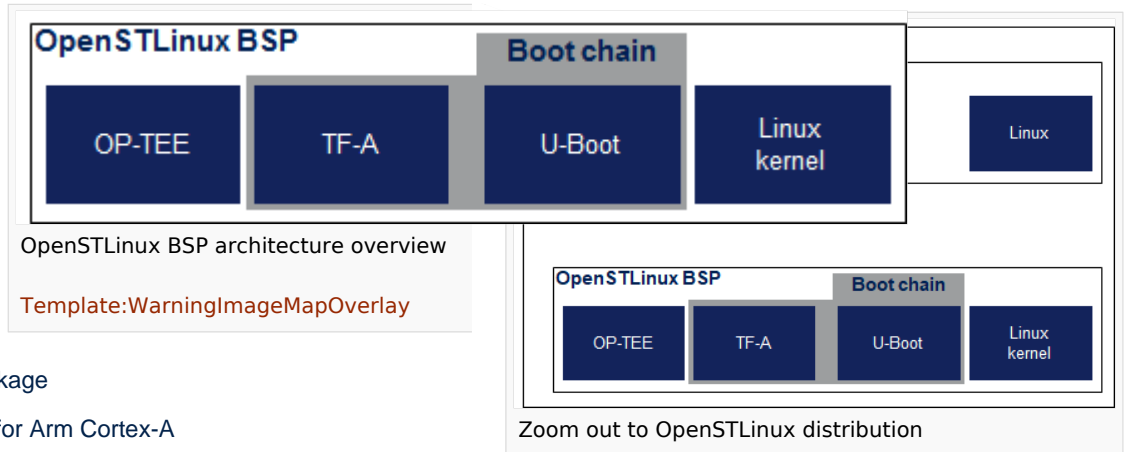

Board support package

Trusted Firmware for Arm Cortex-A

Das U-Boot -- the Universal Boot Loader (see [U-Boot\\_overview](#))

Open Portable Trusted Execution Environment

Operating System