



## SAI Linux driver



## Contents

---

1. SAI Linux driver .....	3
2. SAI internal peripheral .....	5
3. ALSA overview .....	5
4. Menuconfig or how to configure kernel .....	5
5. SAI device tree configuration .....	5
6. Debugfs .....	6
7. Clock overview .....	6
8. Pinctrl overview .....	6



# SAI Linux driver

Stable: 22.10.2019 - 08:02 / Revision: 22.10.2019 - 08:01

## Contents

1 Article purpose .....	3
2 Short Description .....	3
3 Configuration .....	3
<b>3.1 Kernel Configuration .....</b>	<b>3</b>
<b>3.2 Device tree .....</b>	<b>4</b>
4 How to use .....	4
5 How to trace and debug .....	4
6 Source code location .....	4
7 References .....	5

## 1 Article purpose

This article introduces the SAI Linux<sup>®</sup> driver for the SAI internal peripheral.

## 2 Short Description

The SAI<sup>[1]</sup> Linux driver is an ASoC CPU DAI driver implemented in the Linux ALSA framework.

## 3 Configuration

### 3.1 Kernel Configuration

Activate the SAI<sup>[1]</sup> Linux driver in the kernel configuration using the Linux Menuconfig tool: Menuconfig or how to configure kernel.

```
[*] Device Drivers
  [*] Sound card support
    [*] Advanced Linux Sound Architecture
      [*] ALSA for SoC audio support
        STMicroelectronics STM32 SOC audio support
          [*] STM32 SAI interface (Serial Audio Interface) support
```



## 3.2 Device tree

Refer to the [SAI device tree configuration](#) article when configuring the SAI Linux kernel driver.

## 4 How to use

The SAI Linux driver can be accessed from userland through an ALSA device. Refer to [ALSA overview](#) for information on how to list and use ALSA devices.

## 5 How to trace and debug

The `debugfs` and `procfs` file system can be checked to get information on the SAI driver and the resources it uses. A non-exhaustive list of these file system entries is provided below. Refer to [ALSA overview](#) for more details on debugging tools.

- `debugfs` entries:
  - **asoc**: refer to [ALSA\\_overview#How\\_to\\_monitor](#)
  - **clk**: refer to [Clock\\_overview#How\\_to\\_monitor\\_with\\_debugfs](#) to get information on clocks.
  - **pinctrl**: refer to [Pinctrl\\_overview#How\\_to\\_monitor](#) to get information on pins.
  - **regmap**: allow to monitor SAI peripheral registers.

```
$ cat /sys/kernel/debug/regmap/xxx.audio-controller/registers
```

- `procfs` entries:
  - **asound**: refer to [ALSA\\_overview#How\\_to\\_debug](#)
  - **interrupts**: allow to check interrupts.

```
$ cat /proc/interrupts
```

## 6 Source code location

The STM32 SAI peripheral includes two independent audio subblocks that share common resources. The driver source code reflects this architecture.

`sound/soc/stm/stm32_sai.c` : handles common resources such as clock, interrupt, reset and shared register.

`sound/soc/stm/stm32_sai_sub.c` : handles the resources dedicated to each subblock.



---

## 7 References

---

- 1.01.1 SAI internal peripheral

Serial Audio Interface (Mechanism used to transfer non-buffered audio data between processors and/or audio converters.)

ALSA System on Chip

Central processing unit

Digital Audio Interface

Advanced Linux sound architecture

Process File System (See <https://en.wikipedia.org/wiki/Procsfs> for more details)

Debug File System (See <https://en.wikipedia.org/wiki/Debugfs> for more details)

### Permission error

---

*Stable: 21.01.2020 - 13:23 / Revision: 21.01.2020 - 13:21*

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST\_editors, ST\_readers, Selected\_editors, sysop, reviewer

### Permission error

---

*Stable: 04.02.2020 - 07:47 / Revision: 04.02.2020 - 07:36*

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST\_editors, ST\_readers, Selected\_editors, sysop, reviewer

### Permission error

---

*Stable: 31.01.2020 - 12:57 / Revision: 31.01.2020 - 12:52*

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST\_editors, ST\_readers, Selected\_editors, sysop, reviewer

### Permission error

---

*Stable: 07.02.2020 - 10:43 / Revision: 07.02.2020 - 08:48*



You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST\_editors, ST\_readers, Selected\_editors, sysop, reviewer

## Permission error

---

*Stable: 04.02.2020 - 07:47 / Revision: 04.02.2020 - 07:34*

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST\_editors, ST\_readers, Selected\_editors, sysop, reviewer

## Permission error

---

*Stable: 15.10.2019 - 11:58 / Revision: 15.10.2019 - 11:57*

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST\_editors, ST\_readers, Selected\_editors, sysop, reviewer

## Permission error

---

*Stable: 30.01.2020 - 13:45 / Revision: 30.01.2020 - 13:43*

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST\_editors, ST\_readers, Selected\_editors, sysop, reviewer