



SYSCFG internal peripheral



Contents

| | |
|---|---|
| 1. SYSCFG internal peripheral | 3 |
| 2. STM32MP15 resources | 6 |
| 3. TF-A overview | 6 |
| 4. U-Boot overview | 6 |
| 5. STM32MP15 Linux kernel overview | 6 |
| 6. STM32CubeMP1 architecture | 6 |
| 7. I2C overview | 6 |
| 8. STM32CubeMX | 7 |
| 9. STM32MPU Embedded Software architecture overview | 7 |
| 10. How to assign an internal peripheral to a runtime context | 7 |



SYSCFG internal peripheral

Stable: 04.02.2020 - 15:40 / Revision: 04.02.2020 - 15:31

Contents

| | |
|--|----------|
| 1 Article purpose | 3 |
| 2 Peripheral overview | 3 |
| 2.1 Features | 3 |
| 2.2 Security support | 3 |
| 3 Peripheral usage and associated software | 4 |
| 3.1 Boot time | 4 |
| 3.2 Runtime | 4 |
| 3.2.1 Overview | 4 |
| 3.2.2 Software frameworks | 4 |
| 3.2.3 Peripheral configuration | 4 |
| 3.2.4 Peripheral assignment | 4 |
| 4 References | 5 |

1 Article purpose

The purpose of this article is to:

- briefly introduce the SYSCFG peripheral and its main features
- indicate the level of security supported by this hardware block
- explain how it can be allocated to the three runtime contexts and linked to the corresponding software components
- explain, when necessary, how to configure the SYSCFG peripheral.

2 Peripheral overview

The SYSCFG peripheral is used to configure various system aspects like IOs compensation, Ethernet clocking path, ...

2.1 Features

Refer to the [STM32MP15 reference manuals](#) for the complete list of features, and to the software components, introduced below, to see which features are really implemented in ST software.

2.2 Security support

The SYSCFG is a **non secure** peripheral.



3 Peripheral usage and associated software

3.1 Boot time

The SYSCFG peripheral is configured by TF-A and U-Boot at boot time.

3.2 Runtime

3.2.1 Overview

Linux and STM32Cube can directly change the SYSCFG at runtime from various drivers.

For instance, I2C fast mode plus (FM+) can be enabled for each instance in the SYSCFG so:

- Linux I2C driver uses syscon^[1] to enable this mode in the SYSCFG for the instances allocated to itself
- STM32Cube I2C HAL driver uses its SYSCFG HAL driver to do the same on the instances allocated to itself

3.2.2 Software frameworks

| Do | Peri | Software frameworks | | Comment |
|---|-----------------------------|---------------------------------------|-------------------------|---------|
| main Cortex -A7 secure (OP-TEE) | Cortex-A7non-secure (Linux) | Cortex-M4 (STM32Cube) | | |
| Core | SYSCFG | Linux syscon framework ^[1] | STM32Cube SYSCFG driver | |

3.2.3 Peripheral configuration

The configuration is applied by the firmware running in the context to which the peripheral is assigned. The configuration can be done alone via the STM32CubeMX tool for all internal peripherals, and then manually completed (particularly for external peripherals), according to the information given in the corresponding software framework article.

3.2.4 Peripheral assignment


Check boxes illustrate the possible peripheral allocations supported by STM32 MPU Embedded Software:

- means that the peripheral can be assigned () to the given runtime context.

- is used for system peripherals that cannot be unchecked because they are statically connected in the device.

Refer to How to assign an internal peripheral to a runtime context for more information on how to assign peripherals manually or via STM32CubeMX.

The present chapter describes STMicroelectronics recommendations or choice of implementation. Additional possibilities might be described in STM32MP15 reference manuals.

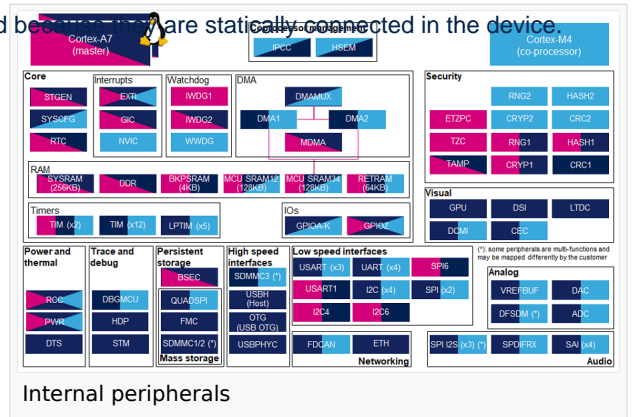

| Do | Per | Runtime allocation | | | | Comme |
|-------|--------|------------------------------|-----------------------|--|--|-------|
| ma | in | | | | | nt |
| Insta | n | Cortex-A7 non-secure (Linux) | Cortex-M4 (STM32Cube) | | | |
| | | | | | | |
| Core | SYSCFG | | | | | |

4 References

- 1.01.1 [Documentation/devicetree/bindings/mfd/syscon.txt](#)

System Configuration

Inter-Integrated Circuit (Bi-directional 2-wire bus standard for efficient inter-IC control.)



Open Portable Trusted Execution Environment

Permission error

Stable: 21.02.2020 - 08:59 / Revision: 14.02.2020 - 10:13

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 30.01.2020 - 13:42 / Revision: 30.01.2020 - 13:40

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 23.01.2020 - 13:52 / Revision: 23.01.2020 - 13:46

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 15.10.2019 - 13:59 / Revision: 15.10.2019 - 13:58

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 21.02.2020 - 08:39 / Revision: 04.02.2020 - 15:22

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 21.02.2020 - 08:44 / Revision: 29.01.2020 - 13:38

You do not have permission to read this page, for the following reason:



The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 31.01.2020 - 13:04 / Revision: 31.01.2020 - 13:02

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 15.10.2019 - 11:55 / Revision: 15.10.2019 - 11:55

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer

Permission error

Stable: 22.01.2020 - 16:08 / Revision: 22.01.2020 - 10:33

You do not have permission to read this page, for the following reason:

The action "Read pages" for the draft version of this page is only available for the groups ST_editors, ST_readers, Selected_editors, sysop, reviewer