



---

TIM internal peripheral



A quality version of this page, approved on 5 January 2021, was based off this revision.

### Warning

This section has not been yet updated/tested for/with the STM32 MPU ecosystem-v3 flow. Information provided in this section may not be not fully applicable for v3 and you may need to proceed to some adaptations. We apologize for this inconvenient.

## Contents

|  |   |
|--|---|
| 1 Article purpose .....                          | 3 |
| 2 Peripheral overview .....                      | 4 |
| 2.1 Features .....                               | 4 |
| 2.2 Security support .....                       | 4 |
| 3 Peripheral usage and associated software ..... | 5 |
| 3.1 Boot time .....                              | 5 |
| 3.2 Runtime .....                                | 5 |
| 3.2.1 Overview .....                             | 5 |
| 3.2.2 Software frameworks .....                  | 5 |
| 3.2.3 Peripheral configuration .....             | 5 |
| 3.2.4 Peripheral assignment .....                | 5 |
| 4 How to go further .....                        | 8 |
| 5 References .....                               | 9 |



---

## 1 Article purpose

---

The purpose of this article is to

- briefly introduce the **TIM** peripheral and its main features
- indicate the level of security supported by this hardware block
- explain how each instance can be allocated to the three runtime contexts and linked to the corresponding software components
- explain how to configure the TIM peripheral



---

## 2 Peripheral overview

---

The TIM peripheral is a multi-channel timer unit, available in various configurations, depending on the instance used. There are basically following categories: advanced-control timers, general-purpose timers and basic timers.

The TIM can provide: PWM with complementary output and dead-time insertion, break detection, input capture<sup>[1]</sup>, quadrature encoder<sup>[2]</sup> interface (typically used for rotary encoders), trigger source for other internal peripherals like: ADC<sup>[3]</sup>, DAC<sup>[4]</sup>, DFSDM<sup>[5]</sup>.

### 2.1 Features

The **TIM** peripheral is available in different configurations, depending on the selected instance :

- TIM1 and TIM8 are advanced-control timers, with 6 independent channels.
- TIM2, TIM3, TIM4 and TIM5 are general-purpose timers, with 4 independent channels.
- TIM12, TIM13 and TIM14 are general-purpose timers, with 2 (TIM12) or 1 (TIM13 and TIM14) independent channels.
- TIM15, TIM16 and TIM17 are also general-purpose timers, with 2 (TIM15) or 1 (TIM16 and TIM17) independent channels. Compare to TIM12, TIM13 and TIM14, this configuration brings some features that are very useful for motor control (like break function, DMA burst mode control, complementary output with dead-time insertion, ...)
- TIM6 and TIM7 are basic timers

Refer to [STM32MP15 reference manuals](#) for the complete list of features, and to the software components, introduced below, to know which features are really implemented.

### 2.2 Security support

The TIM is a **non-secure** peripheral.



## 3 Peripheral usage and associated software

### 3.1 Boot time

The TIM is not used at boot time.

### 3.2 Runtime

#### 3.2.1 Overview

**TIM12** and/or **TIM15** can be allocated to:

- the Arm<sup>®</sup> Cortex<sup>®</sup>-A7 secure core to be controlled in the secure monitor (TF-A or OP-TEE), to perform HSI and CSI calibrations<sup>[6]</sup> in RCC.

**All TIM instances** can be allocated to:

- the Arm<sup>®</sup> Cortex<sup>®</sup>-A7 non-secure to be controlled in Linux<sup>®</sup> by the PWM and/or the IIO frameworks.

or

- the Arm<sup>®</sup> Cortex<sup>®</sup>-M4 to be controlled in STM32Cube MPU Package by TIM HAL driver

Note that RCC<sup>[7]</sup> owns one prescaler per **TIM group** corresponding to **APB1** and **APB2** buses: TIMG1PRE and TIMG2PRE, respectively. The allocation to Cortex-A7 or the Cortex-M4 should ideally be done on a per group basis to get independent clocking setup on each side, this is why the TIM instances groups are shown in the summary table below (#Peripheral assignment).

#### 3.2.2 Software frameworks

| Domain      | Peripheral | Software components                  |  |                      | Comment |
|-------------|------------|--------------------------------------|--|----------------------|---------|
| OP-TEE      | Linux      | STM32Cube                            |  |                      |         |
| Core/Timers | TIM        | TF-A TIM driver<br>OP-TEE TIM driver | Linux PWM framework<br>Linux IIO framework | STM32Cube TIM driver |         |

#### 3.2.3 Peripheral configuration

The configuration is applied by the firmware running in the context to which the peripheral is assigned. The configuration by itself can be performed via the *STM32CubeMX* tool for all internal peripherals. It can then be manually completed (especially for external peripherals) according to the information given in the corresponding software framework article.

For Linux kernel configuration, please refer to [TIM device tree configuration](#) and [TIM Linux driver](#) articles.

#### 3.2.4 Peripheral assignment

**Check boxes** illustrate the possible peripheral allocations supported by STM32 MPU Embedded Software:


- means that the peripheral can be assigned ( ) to the given runtime context.



- is used for system peripherals that cannot be unchecked because they are statically connected in the device.

Refer to [How to assign an internal peripheral to a runtime context](#) for more information on how to assign peripherals manually or via STM32CubeMX.

The present chapter describes STMicroelectronics recommendations or choice of implementation. Additional possibilities might be described in STM32MP15 reference manuals

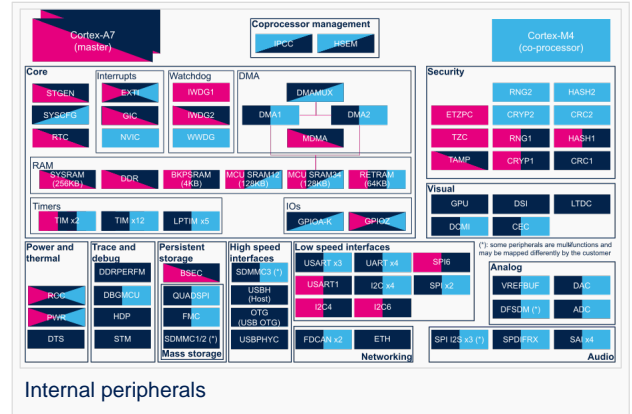

| Domain      | Periphera                 | Runtime allocation           |                       | Comment                    |
|-------------|---------------------------|------------------------------|-----------------------|----------------------------|
| Instance    | Cortex-A7 secure (OP-TEE) | Cortex-A7 non-secure (Linux) | Cortex-M4 (STM32Cube) |                            |
| Core/Timers | TIM                       | TIM1 (APB2 group)            |                       | Assignment (single choice) |
|             |                           | TIM2 (APB1 group)            |                       | Assignment (single choice) |
|             |                           | TIM3 (APB1 group)            |                       | Assignment (single choice) |
|             |                           | TIM4 (APB1 group)            |                       | Assignment (single choice) |
|             |                           | TIM5 (APB1 group)            |                       | Assignment (single choice) |
|             |                           | TIM6 (APB1 group)            |                       | Assignment (single choice) |
|             |                           | TIM7 (APB1 group)            |                       | Assignment (single choice) |
|             |                           | TIM8 (APB2 group)            |                       | Assignment (single choice) |



| Domain | Peripherals | Runtime allocation       |  |  |  | Comment                       |
|--------|-------------|--------------------------|--|--|--|-------------------------------|
|        |             | TIM12<br>(APB1<br>group) |  |  |  | Assignment (single<br>choice) |
|        |             | TIM13<br>(APB1<br>group) |  |  |  | Assignment (single<br>choice) |
|        |             | TIM14<br>(APB1<br>group) |  |  |  | Assignment (single<br>choice) |
|        |             | TIM15<br>(APB2<br>group) |  |  |  | Assignment (single<br>choice) |
|        |             | TIM16<br>(APB2<br>group) |  |  |  | Assignment (single<br>choice) |
|        |             | TIM17<br>(APB2<br>group) |  |  |  | Assignment (single<br>choice) |



---

## 4 How to go further

---

STM32 cross-series timer overview<sup>[8]</sup> application note.





---

## 5 References

---

- Input capture
- Quadrature encoder
- ADC internal peripheral
- DAC internal peripheral
- DFSDM internal peripheral
- How to activate HSI and CSI oscillators calibration
- RCC internal peripheral
- STM32 cross-series timer overview application note