



# STM32MP1 Distribution Package - OpenSTLinux distribution



# STM32MP1 Distribution Package - OpenSTLinux distribution

Stable: 21.02.2020 - 09:47 / Revision: 20.02.2020 - 09:44

This article aims to give the following information:

- How to download and install the **latest** OpenSTLinux distribution for the STM32 microprocessors Series
- Where to find the associated release note
- Where to find the previous releases (archives)



For more specific information, go through the [Distribution Package](#) article relative to your **STM32 microprocessors Series**: [Category:Distribution Package](#)

## 1 STM32MP15-Ecosystem-v1.1.0 release

- The STM32MP1 OpenSTLinux distribution is delivered through a manifest repository location and a manifest revision (**openstlinux-4.19-thud-mp1-19-10-09**).
- The installation relies on the `repo` command. In case the Repo tool (a Google-built repository management tool that runs on top of Git) is not yet installed and configured on the host PC, refer to the [PC prerequisites](#) article.
- The OpenSTLinux distribution is massively using open source software (OSS) packages that are downloaded from a variety of open source repositories; so it is required that the IT infrastructure proxies do not forbid such accesses. If some proxy-related issues are suspected, refer to the [How to avoid proxy issues](#) article.
- Install the STM32MP1 OpenSTLinux distribution


|              | STM32MP1 Distribution Package OpenSTLinux distribution - STM32MP15-Ecosystem-v1.1.0 release  |
|--------------|--|
|              | <ul style="list-style-type: none"><li>• Go to the host PC directory where to install the Distribution Package (<i>&lt;Distribution Package installation directory&gt;</i>). Example, if following the <a href="#">proposition to organize the working directory</a>:<br/><pre>\$ cd &lt;working directory path&gt;/Distribution-Package</pre></li><li>• Create the OpenSTLinux distribution installation sub-directory:<br/><pre>\$ mkdir openstlinux-4.19-thud-mp1-19-10-09<br/>\$ cd openstlinux-4.19-thud-mp1-19-10-09</pre></li><li>• Initialize repo in the current directory (More details on 'repo init' <a href="#">here</a>).</li></ul> |
| Installation | <pre>\$ repo init -u https://github.com/STMicroelectronics/oe-manifest.git -b refs/tags/openstlinux-4.19-thud-mp1-19-10-09</pre>   |



| STM32MP1 Distribution Package OpenSTLinux distribution - STM32MP15-Ecosystem-v1.1.0 release |  |
|---|--|
|   | <p><b>Note:</b> "ERROR 404" may appear during "repo init" command without any impact on the process</p> <ul style="list-style-type: none"> <li>Synchronize the local project directories with the remote repositories specified in the manifest (more details on 'repo sync' <a href="#">here</a>)</li> </ul> <div style="border: 1px dashed black; padding: 10px; margin: 10px 0;"> <pre>\$ repo sync</pre> </div> <p><b>Note:</b> <i>Distribution package</i> needs around 140MB to be installed (and around 25GB once <i>distribution package</i> is compiled).</p> |
| Release note  | <p>Details about the content of this software package are available in the <b>associated</b> STM32MP15 ecosystem release note.</p> <p>If interested in previous releases, go through the <a href="#">archives</a> of the ecosystem release note.</p>   |

- The **OpenSTLinux distribution installation directory** is in the *<Distribution Package installation directory>*, and is named `openstlinux-4.19-thud-mp1-19-10-09`:



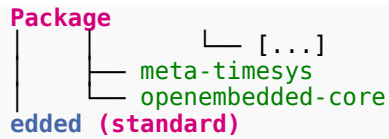

Timesys layer for OpenEmbedded (standard)  
Core metadata for current versions of OpenEmb

## 2 Archives

### 2.1 STM32MP15-Ecosystem-v1.0.0 release


- The STM32MP1 OpenSTLinux distribution is delivered through a manifest repository location and a manifest revision ([openstlinux-4.19-thud-mp1-19-02-20](#)).
- The installation relies on the `repo` command. In case the Repo tool (a Google-built repository management tool that runs on top of Git) is not yet installed and configured on the host PC, refer to the [PC prerequisites](#) article.
- The OpenSTLinux distribution is massively using open source software (OSS) packages that are downloaded from a variety of open source repositories; so it is required that the IT infrastructure proxies do not forbid such accesses. If some proxy-related issues are suspected, refer to the [How to avoid proxy issues](#) article.
- Install the STM32MP1 OpenSTLinux distribution

| STM32MP1 Distribution Package OpenSTLinux distribution - STM32MP15-Ecosystem-v1.0.0 release |   |
|---|---|
| Installation  | <ul style="list-style-type: none"><li>• Go to the host PC directory where to install the Distribution Package (<i>&lt;Distribution Package installation directory&gt;</i>). Example, if following the <a href="#">proposition to organize the working directory</a>:</li></ul>  |
|   | <pre>\$ cd &lt;working directory path&gt;/Distribution-Package</pre>  |
|   | <ul style="list-style-type: none"><li>• Create the OpenSTLinux distribution installation sub-directory:</li></ul>   |
|   | <pre>\$ mkdir openstlinux-4.19-thud-mp1-19-02-20 \$ cd openstlinux-4.19-thud-mp1-19-02-20</pre>   |
|   | <ul style="list-style-type: none"><li>• Initialize repo in the current directory.</li></ul>   |
|   | Details:<br>The below command downloads (in the <code>.repo</code> directory) the latest repo source code and a manifest file ( <i>default.xml</i> ) that describes the directory structure of the repositories for OpenSTLinux.<br>The <code>-u</code> option specifies the manifest repository location, while the <code>-b</code> option specifies its branch. |
|   | <pre>\$ repo init -u https://github.com/STMicroelectronics/oe-manifest.git -b refs/tags/openstlinux-4.19-thud-mp1-19-02-20</pre>  |




| STM32MP1 Distribution Package OpenSTLinux distribution - STM32MP15-Ecosystem-v1.0.0 release |  |
|---|--|
|   | <p><b>Note:</b> "ERROR 404" may appear during "repo init" command without any impact on the process</p> <ul style="list-style-type: none"><li>• Synchronize the local project directories with the remote repositories specified in the manifest</li></ul> <p>Details:</p> <p>If a local project does not yet exist, the command clones a new local directory from the remote repository and sets up tracking branches as specified in the manifest.</p> <p>If the local project already exists, the command updates the remote branches and rebases any new local changes on top of the new remote changes.</p> <pre>\$ repo sync</pre> |
| Release note  | <p>Details about the content of this software package are available in the <b>associated</b> STM32MP15 ecosystem <a href="#">release note</a>.</p> <p>If interested in previous releases, go through the <a href="#">archives</a> of the ecosystem release note.</p>   |

- The **OpenSTLinux distribution installation directory** is in the *<Distribution Package installation directory>*, and is named `openstlinux-4.19-thud-mp1-19-02-20`:

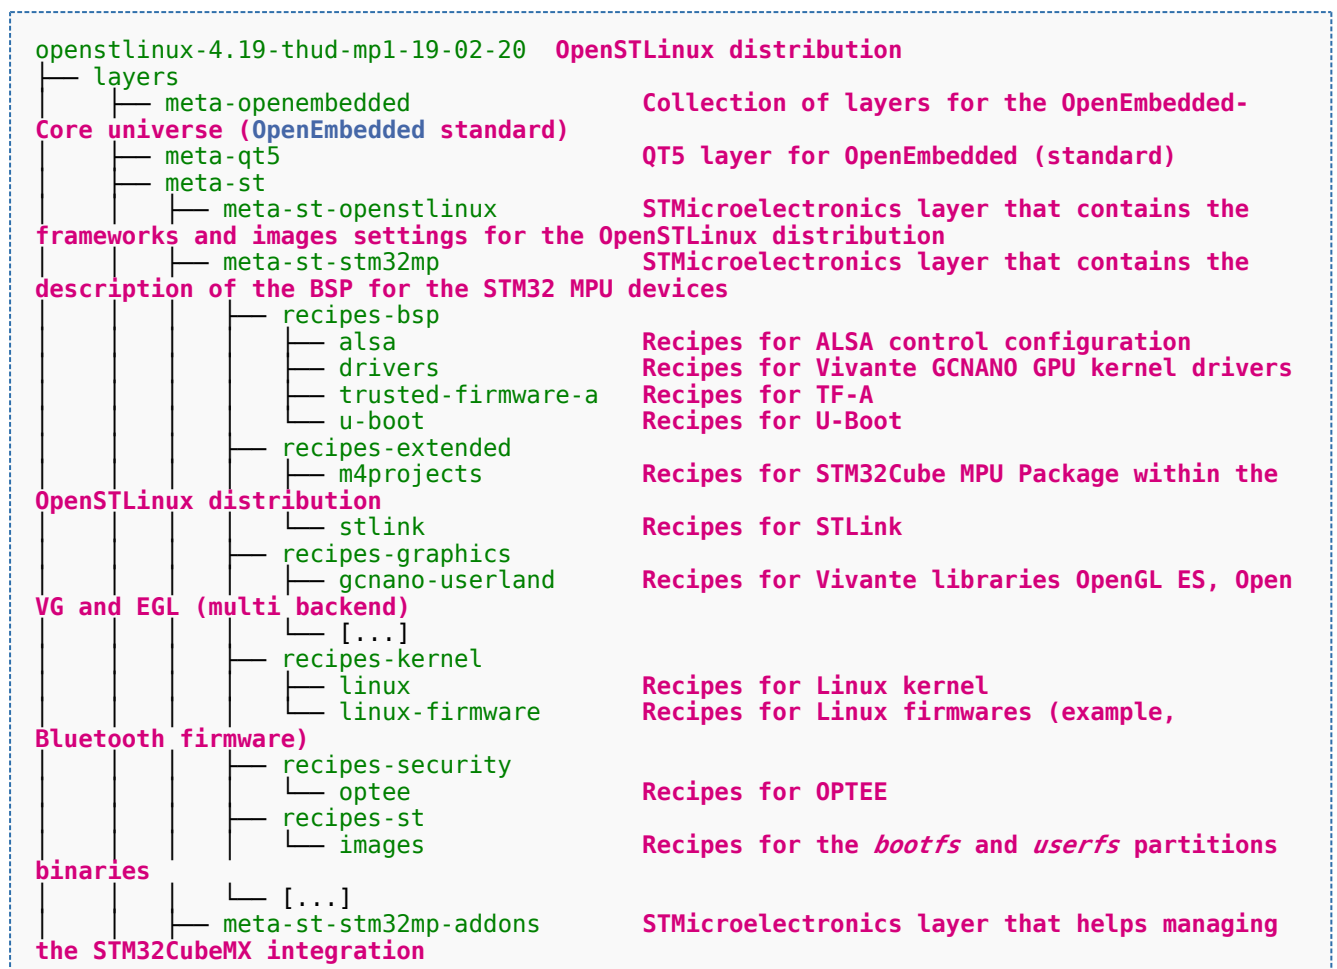



## STM32MP1 Distribution Package - OpenSTLinux distribution

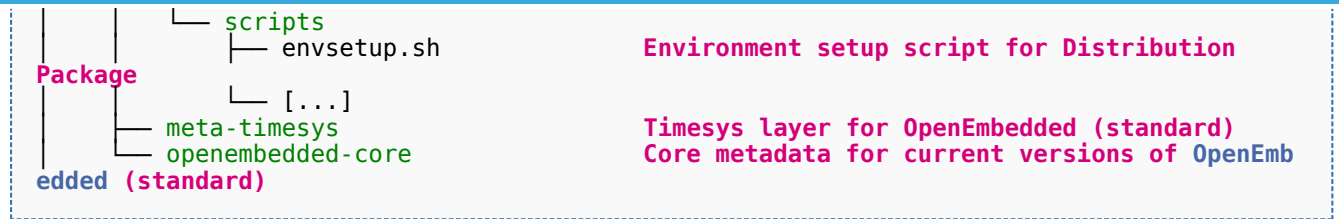

Open Source Software

Board support package

Microprocessor Unit

Advanced Linux sound architecture

Graphics Processing Units

Trusted Firmware for Arm Cortex-A

Das U-Boot -- the Universal Boot Loader (see [U-Boot\\_overview](#))

Open Graphics Library (See <http://www.opengl.org/> for more details)

Open Vector Graphics (See <http://www.khronos.org/opengv/> for more details)

Khronos Native Platform Graphics Interface (See <http://www.khronos.org/egl/> for more details)

ST in-circuit debugger and programmer for the STM8 and STM32 microcontroller families (See [ST-LINK](#) for more details)