



Hardware random overview



Hardware random overview

Stable: 15.04.2020 - 09:09 / Revision: 15.04.2020 - 09:07

Contents

1 Article Purpose	2
2 Framework purpose	2
3 System overview	2
3.1 Component description	3
3.2 API description	3
4 Configuration	4
4.1 Kernel configuration	4
4.2 Device tree configuration	4
5 How to use the framework	4
5.1 How to use from char device	4
5.2 How to use from sysfs	4
6 How to trace and debug the framework	5
7 Source code location	5
8 To go further	5
9 References	5

1 Article Purpose


This article gives information about the hardware random (HWRNG) framework.

2 Framework purpose

The Hardware random framework is integrated in the kernel. It provides access to RNG peripherals and focuses on supporting the hardware number generator.

3 System overview

The HW random framework allows retrieving random numbers in userland.

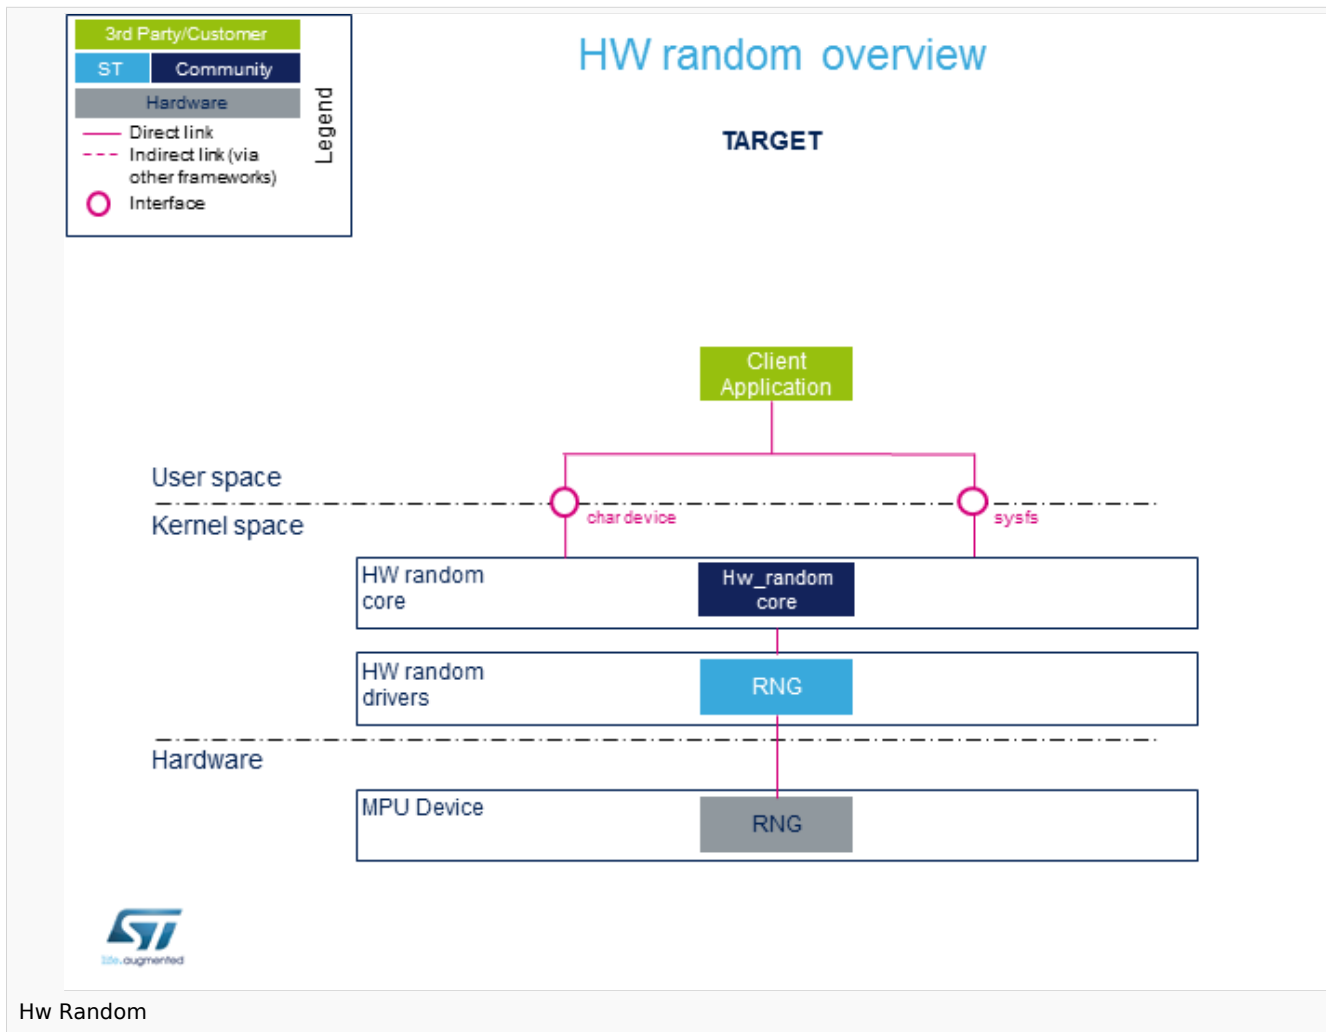

3.1 Component description

- **HW random core** (Kernel space)

Generic interface in kernel space. This layer is in charge of creating the character device (char device) and sysfs to access hw_random.

- **RNG** (Kernel space)

Hardware random Linux® drivers handling the HW blocks.

- **RNG** (Hardware)

HW blocks handling the RNG peripheral.

3.2 API description

The Hardware random framework uses char device API^[1] ioctl operations. For additional information, refer to:

- sysfs interface.
- Kernel Documentation directory^[2]



4 Configuration

4.1 Kernel configuration

The Hardware random support is activated by default in ST deliveries. No specific configuration is required apart from enabling or disabling peripheral support using Linux[®] Menuconfig tool. Refer to [Menuconfig](#) or [how to configure kernel](#) and select:

```
[*] Device Drivers --->
  [*] Character devices --->
    [*] Hardware Random Number Generator Core support --->
      [*] STMicroelectronics STM32 random number generator
```

4.2 Device tree configuration

DT configuration can be done thanks to the [STM32CubeMX](#).

A detailed device tree configuration is described in [RNG device tree configuration](#).

5 How to use the framework

The framework provides external interfaces from userland : [How to control RNG](#).

5.1 How to use from char device

The community tool for using Hardware random framework is [rng_tools](#)^[3] which provides a complete set of utilities related to random number generators:

- **rngd**: runs a background daemon that opens `/dev/hwrng` file (default) to connect and retrieve random numbers.
- **rngtest**: runs different tests that check the entropy and verify the compliance regarding FIPS 140-2 standard.

5.2 How to use from sysfs

Available devices compatible with Hardware framework can be listed using `sysfs` commands:

```
Board $> cat /sys/class/misc/hw_random/rng_available
stm32-rng
```

The selected device is shown here:



```
Board $> cat /sys/class/misc/hw_random/rng_current  
stm32-rng
```

To select a different device:

```
Board $> echo "stm32-rng"> /sys/class/misc/hw_random/rng_current
```

6 How to trace and debug the framework

Light information on the framework can be accessed by using `sysfs`.

By default, the framework does not provide any specific debug output or dynamic debugging tool.

7 Source code location

Hardware random drivers and framework are available here^[4].

8 To go further

Code examples are directly available from `rng-tools`^[3] github.

9 References

- <https://bootlin.com/doc/legacy/accessing-hardware/accessing-hardware.pdf>
- [Documentation/hw_random.txt](#)
- [3.03.1 Rng_tools source code](#)
- [drivers/char/hw_random](#) , [Hw_random sources](#)

Random Number Generator

System File System (See <https://en.wikipedia.org/wiki/Sysfs> for more details)

Application programming interface

Device Tree