



USBPHYC device tree configuration



Contents

1. USBPHYC device tree configuration	3
2. Device tree	10
3. OTG device tree configuration	10
4. OTG internal peripheral	10
5. PHY overview	10
6. Regulator overview	10
7. STM32CubeMX	10
8. USBH device tree configuration	10
9. USBH internal peripheral	11
10. USBPHYC internal peripheral	11



Contents

1 Article purpose	4
2 DT bindings documentation	5
3 DT configuration	6
3.1 DT configuration (STM32 level)	6
3.2 DT configuration (board level)	6
3.3 DT configuration example	7
4 How to configure the DT using STM32CubeMX	9
5 References	10



1 Article purpose

This article explains how to configure the **USBPHYC** internal peripheral when it is assigned to the Linux[®]OS. In that case, it is controlled by the PHY framework.


The configuration is performed using the [device tree](#) mechanism.

It is used by the *USBPHYC Linux driver*^[1] which registers the relevant information in PHY framework.



2 DT bindings documentation

USBPHYC device tree bindings^[2] describe all the required and optional functions.

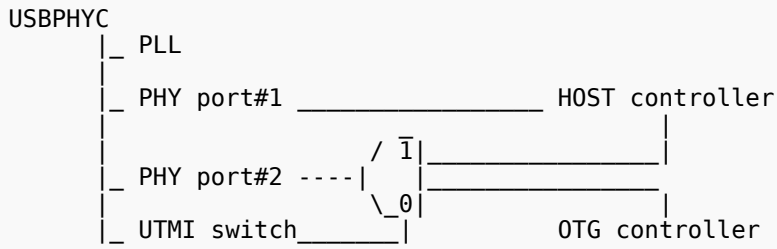



3 DT configuration

This hardware description is a combination of the **STM32 microprocessor** device tree files (*.dtsi* extension) and **board** device tree files (*.dts* extension). See the [Device tree](#) for an explanation of the device tree file split.

STM32CubeMX can be used to generate the board device tree. Refer to [How to configure the DT using STM32CubeMX](#) for more details.

3.1 DT configuration (STM32 level)

The USBPHYC node is declared in `stm32mp151.dtsi`^[3].

- root node e.g. `usbphyc` describes the USBPHYC hardware block parameters such as registers, clocks, resets and supplies.
- child nodes e.g. `usbphyc_port0` and `usbphyc_port1` describe the two high speed PHY ports: *port#1* and *port#2*.

```
usbphyc: usbphyc@address {
    compatible = "st,stm32mp1-usbphyc";
    ...
    clocks, resets and supplies */
    usbphyc_port0: usb-phy@0 {
        ...
    };
    usbphyc_port1: usb-phy@1 {
        ...
    };
};
```

/* usbphyc resources: registers,
/* usbphyc HS PHY port#1 */
/* usbphyc HS PHY port#2 */



This device tree part is related to STM32 microprocessors. It must be kept as is, without being modified by the end-user.

3.2 DT configuration (board level)

Follow the sequences described in the below chapters to configure and enable the USBPHYC on your board.

The '`usbphyc`' root node must be filled in:

- Enable the USBPHYC block by setting `status = "okay"`.

The **child nodes** for each port must be filled in:

- Configure the USBPHYC 3V3 regulator^[4] by setting `phy-supply = <&your_regulator>`.



USB HS PHY ports require an external 3V3 power supply to be provided at VDD3V3_USBHS pin.

- Optional, for ecosystem release v2.1.0, you may configure the VBUS 5V regulator^[4] by setting `vbus-supply = <&your_regulator>`.

The **child nodes** for each port may also be tuned:

- Optional: create a `usb_phy_tuning` node that can take optional parameters in DT root folder ('/')
- Optional: add '`st,phy-tuning = <&usb_phy_tuning>`' in '`usbphyc_port0`' and/or '`usbphyc_port1`' node to use this tuning.



It may be necessary to adjust the phy settings to compensate parasitics, which can be due to USB connector/receptacle, routing, ESD protection component.

Optional tuning parameter list is available in *USBPHYC device tree bindings*^[2].

3.3 DT configuration example

The example below shows how to enable and configure USBPHYC ports in the board file.

For ecosystem release v2.1.0

```
&usbphyc {
    status = "okay";                                /* enable USB HS PHY controller */
};

&usbphyc_port0 {
    phy-supply = <&vdd_usb>;                          /* references the 3V3 voltage
    regulator on the user board */
    vbus-supply = <&vbus_sw>;                          /* references the optional 5V voltage
    regulator on the user board */
    st,phy-tuning = <&usb_phy_tuning>;                /* optional USB HS PHY port#1 tuning
*/
};

&usbphyc_port1 {
    phy-supply = <&vdd_usb>;                          /* references the 3V3 voltage
    regulator on the user board */
    st,phy-tuning = <&usb_phy_tuning>;                /* optional USB HS PHY port#2 tuning
*/
};
```

```
/ {
    example, to be added in DT root node, e.g. '/' /* optional USB HS PHY tuning
    usb_phy_tuning: usb-phy-tuning {
        st,current-boost = <2>;
        st,no-lfs-fb-cap;
        st,hs-dc-level = <2>;
        st,hs-rftime-reduction;
        st,hs-current-trim = <5>;
        st,hs-impedance-trim = <0>;
        st,squelch-level = <1>;
        st,no-hs-ftime-ctrl;
        st,hs-tx-staggering;
    };
};
```

For ecosystem release v1.0.0 to v2.1.0

```
&usbphyc {
    status = "okay";                                /* enable USB HS PHY controller */
};

&usbphyc_port0 {
    phy-supply = <&vdd_usb>;                          /* references the 3V3 voltage
    regulator on the user board */
    st,phy-tuning = <&usb_phy_tuning>;                /* optional USB HS PHY port#1 tuning
```



```

*/
};

&usbphyc_port1 {
    phy-supply = <&vdd_usb>; /* references the 3V3 voltage
regulator on the user board */
    st,phy-tuning = <&usb_phy_tuning>; /* optional USB HS PHY port#2 tuning
*/
};

```

```

/ {
example, to be added in DT root node, e.g. '/' */ /* optional USB HS PHY tuning
usb_phy_tuning: usb-phy-tuning {
    st,current-boost = <2>;
    st,no-lfs-fb-cap;
    st,hs-dc-level = <2>;
    st,hs-rftime-reduction;
    st,hs-current-trim = <5>;
    st,hs-impedance-trim = <0>;
    st,squelch-level = <1>;
    st,no-hs-ftime-ctrl;
    st,hs-tx-staggering;
};
};

```

Static configuration of the UTMI switch to assign the **port#2** to either **USBH** or **OTG** is done by the **PHY user node**^[5]:



- Please refer to [USBH_device_tree_configuration](#)
- Please refer to [OTG_device_tree_configuration](#)

usbphyc_port1 user must configure an additional specifier for UTMI switch: **0** to select OTG, **1** to select USBH

Abstract of the example to configure port#2, to be assigned to the USBH:

```

&usbh_ehci {
    phys = <&usbphyc_port0>, <&usbphyc_port1 1>; /* 1: UTMI switch selects the USBH */
    phy-names = "usb", "usb";
    ...
}

```

Abstract of the example to configure port#2, to be assigned to the OTG:

```

&usbotg_hs {
    phys = <&usbphyc_port1 0>; /* 0: UTMI switch selects the OTG */
    phy-names = "usb2-phy";
    ...
}

```




4 How to configure the DT using STM32CubeMX

The STM32CubeMX tool can be used to configure the STM32MPU device and get the corresponding platform configuration device tree files.

The STM32CubeMX may not support all the properties described in the above DT bindings documentation paragraph. If so, the tool inserts **user sections** in the generated device tree. These sections can then be edited to add some properties and they are preserved from one generation to another. Refer to STM32CubeMX user manual for further information.



5 References

Please refer to the following links for additional information:

- [drivers/phy/st/phy-stm32-usbphyc.c](#) , STM32 USB PHY Controller driver
- [2.02.1 Documentation/devicetree/bindings/phy/phy-stm32-usbphyc.yaml](#) , USBPHYC device tree bindings
- [arch/arm/boot/dts/stm32mp151.dtsi](#) , STM32MP151 device tree file
- [4.04.1 Regulator overview](#)
- [Documentation/devicetree/bindings/phy/phy-bindings.txt](#) ,PHY generic bindings

Linux[®] is a registered trademark of Linus Torvalds.

Operating System

Device Tree

USB 2.0 Transceiver Macrocell Interface

USB On-The-Go (Capability/type of USB port, acting primarily as USB device, to also act as USB host. Also known as USB OTG.)

High Speed (MIPI[®] Alliance DSI standard)

USB Host (STM32 specific)

Stable: 19.03.2021 - 08:52 / Revision: 19.03.2021 - 08:49

Invalid target: no reviewed revision corresponds to the given ID.

[Return to Device tree.](#)

Stable: 26.03.2021 - 15:53 / Revision: 19.03.2021 - 13:15

Invalid target: no reviewed revision corresponds to the given ID.

[Return to OTG device tree configuration.](#)

Stable: 26.03.2021 - 15:54 / Revision: 18.03.2021 - 14:35

Invalid target: no reviewed revision corresponds to the given ID.

[Return to OTG internal peripheral.](#)

Stable: 04.02.2020 - 08:03 / Revision: 04.02.2020 - 07:54

Invalid target: no reviewed revision corresponds to the given ID.

[Return to PHY overview.](#)

Stable: 11.06.2020 - 12:50 / Revision: 11.06.2020 - 12:12

Invalid target: no reviewed revision corresponds to the given ID.

[Return to Regulator overview.](#)

Stable: 23.09.2020 - 13:22 / Revision: 12.06.2020 - 13:25

Invalid target: no reviewed revision corresponds to the given ID.

[Return to STM32CubeMX.](#)

Stable: 26.03.2021 - 15:18 / Revision: 18.03.2021 - 14:32

Invalid target: no reviewed revision corresponds to the given ID.

[Return to USBH device tree configuration.](#)

Stable: 25.09.2020 - 09:43 / Revision: 25.09.2020 - 09:37



Stable: 25.09.2020 - 09:43 / Revision: 25.09.2020 - 09:39

Invalid target: no reviewed revision corresponds to the given ID.

[Return to USBH internal peripheral](#)

Stable: 25.09.2020 - 09:43 / Revision: 25.09.2020 - 09:39

Invalid target: no reviewed revision corresponds to the given ID.

[Return to USBPHYC internal peripheral](#).